NINTENDO AGS / TRU 4 - WAY UPDATE KIT

PART #52235

- **IMPORTANT NOTE: The following assembly will require the assistance of a second person for a short period of time.**

CONTENTS:

A - (4) End Panels
B - (1) Header Assembly
w/Graphic Inserts installed
C- (4) Top Brackets (Hardware Bag)
D - (4) Shelf Brackets (Hardware Bag)
E - (8) 1" Square Dual Lock (Hardware Bag)
F - (16) 1" x 6" Dual Lock (Hardware Bag)
G - (8) Lower Brackets (Hardware Bag)
4 - w/Dog Legs 4 - Regulars

(1) Hardware Bag Contents:
(16) #10 x 3/4" Phillip Pan Head Screws
(4) #8 x 3/4" Phillips Pan Head Self drilling Screws
(4) #10 - 32 x 5/8" Phillip Pan Head Machine Screws
(4) #10 - 32 Hex Kep Nuts

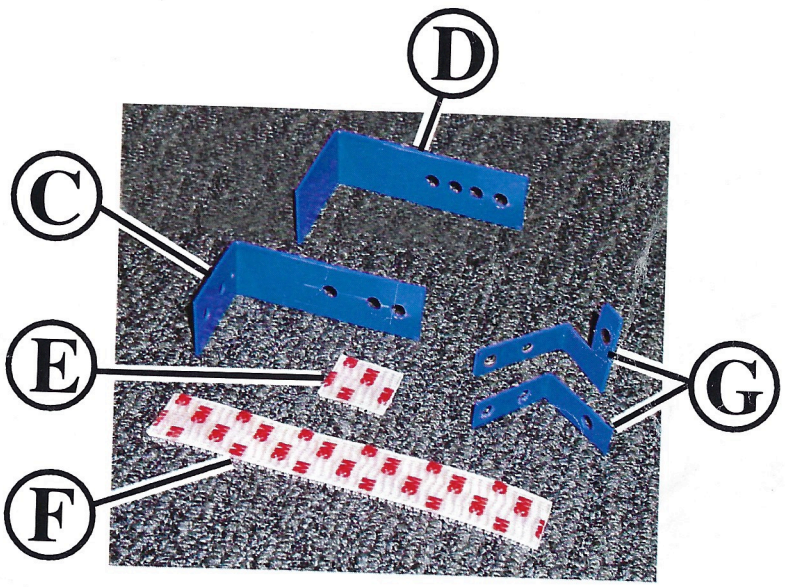

391909001 © RTC 9/2/2003

NINTENDO AGS / TRU
4 - WAY UPDATE KIT

PART #52235

PHOTO 1

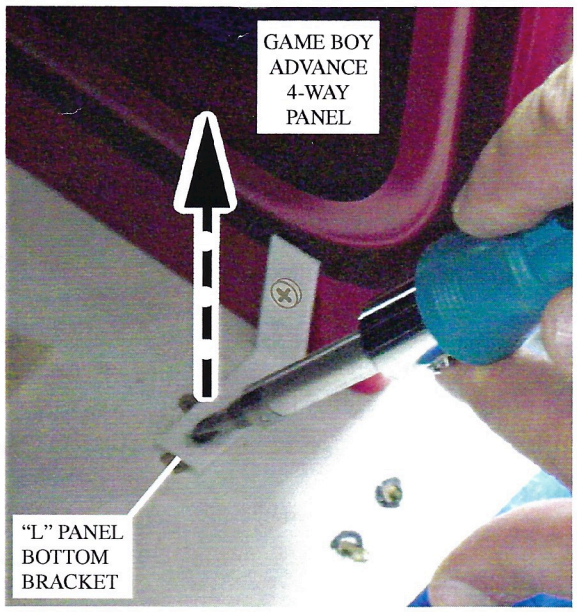

PHOTO 2

PHOTO 3

1. The following directions will show you how to remove components from your existing gondola unit. Remove the screws holding the two "L" PANEL BOTTOM BRACKETS from the lower rear position on the first GAME BOY ADVANCE 4-WAY PANEL (see PHOTO 2). Remove the one screw holding the "L" PANEL TOP REVERSABLE BRACKET on the GAME BOY ADVANCE 4-WAY PANEL and pull out (see PHOTO 3), then replace this screw back into the fixture. Place the GAME BOY ADVANCE 4-WAY PANEL to the side and continue removing the remaining GAME BOY ADVANCE 4-WAY PANEL.

NOTE: If you install on a bare fixture, please skip to STEP #11.

PHOTO 4

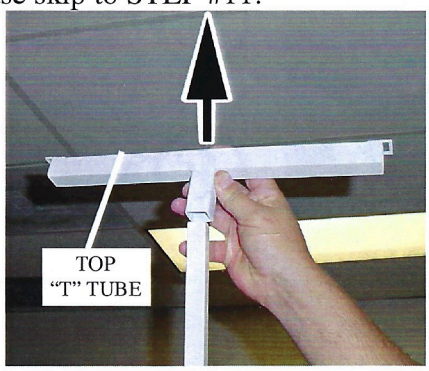

PHOTO 5

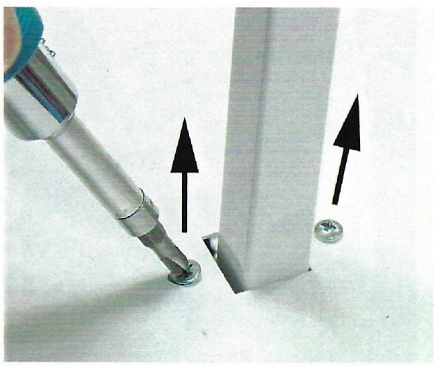

PHOTO 6

2. Remove the two (2) LARGE MOBILES from the TOP "T" TUBE by unhooking the "S" HOOKS and place to the side (see PHOTO 4).

3. Lift up and remove the TOP "T" TUBE and place to the side (see PHOTO 5).

4. Remove the two (2) screws from the TOP HEADER PAN as shown in PHOTO 6.

5. Grasp the TOP HEADER PAN and slide up to remove (see PHOTO 7).

PHOTO 7

391909001 © RTC 9/2/2003

PHOTO 8

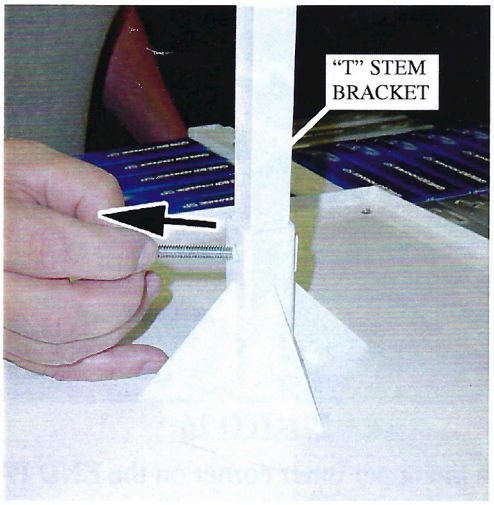

PHOTO 9

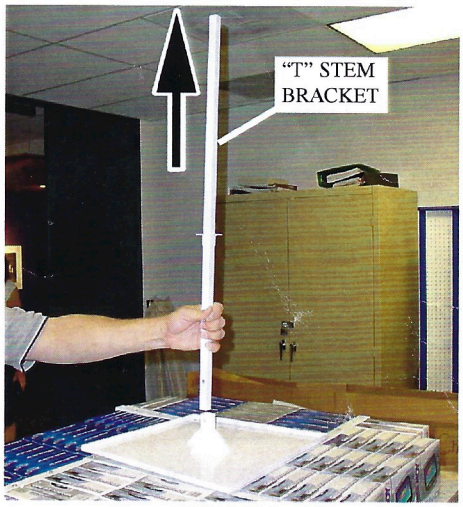

PHOTO 10

6. Grasp the HEADER GRAPHIC PANEL assembly and lift up to remove (see PHOTO 8). This assembly can be dismantled by separating the four (4) GRAPHIC PANELS.
7. Remove the screw from the base of the "T" STEM BRACKET, then grasp the CENTER POLE and lift up to remove (see PHOTOS 9 & 10).

PHOTO 11

PHOTO 12

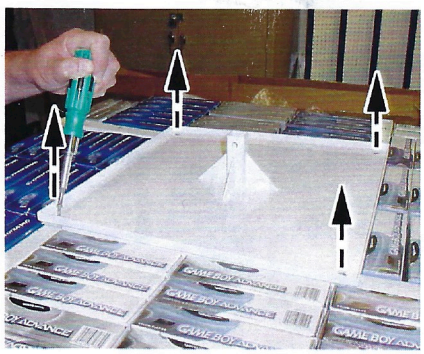

PHOTO 13

8. Take a roll of SHIPPING TAPE (not supplied) and starting with the top shelf as shown in PHOTOS 11 & 12, walk around the display twice while pulling the tape tight as you go. **This layer of tape <u>MUST BE INSTALLED</u> before proceeding to the next step.**
9. The BOTTOM HEADER PAN is held in place with four (4) screws which will need to be removed (see PHOTO 13). ***<u>These screws are also important to the GONDOLA STRUCTURE and care should be taken to replace these immediately !</u>*** Replace these screws back into the GONDOLA FIXTURE as soon as possible (see PHOTO 13).
10. The SHIPPING TAPE can now be removed from the assembly and discarded.
11. You are now ready to start installing your new components. Remove the two (2) lower screw and posts from a SIDE PANEL and install the LOWER BRACKETS (see PHOTO 14).

<u>NOTE</u>: The LOWER BRACKET containing the upper dog leg will be attached to the inside position shown in PHOTO 14.

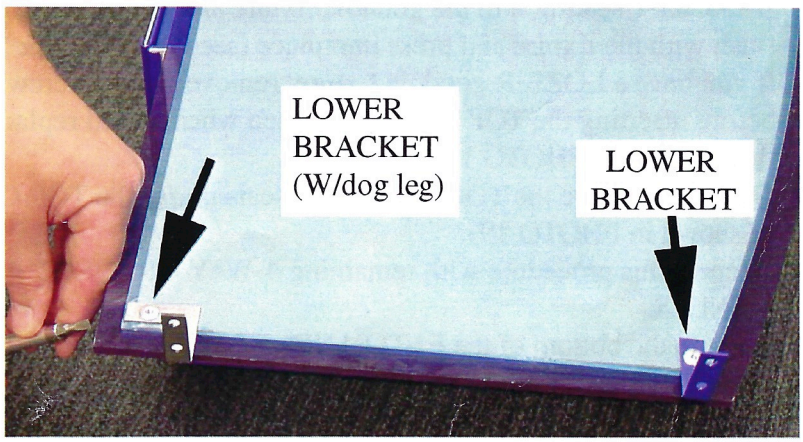

PHOTO 14

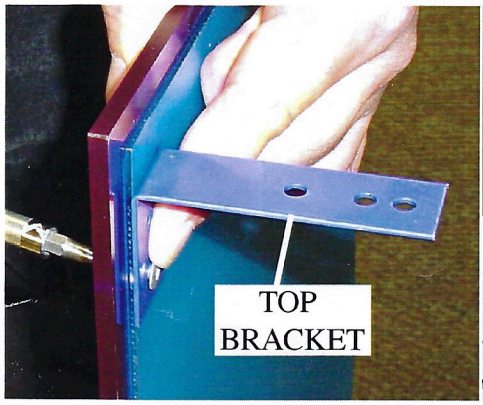

PHOTO 15

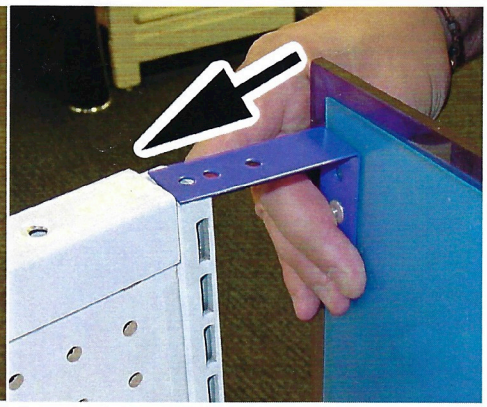

PHOTO 16

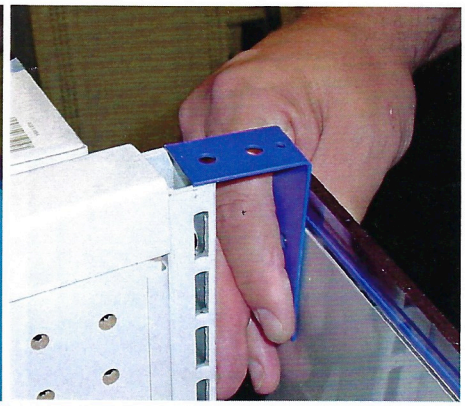

PHOTO 17

12. Remove the existing screw set from the upper inner corner on the END PANEL. The TOP BRACKET can be attached with the LONG ARM or SHORT ARM facing out. If your gondola fixture is a LOZIER, attach the TOP BRACKET with the LONG ARM facing out (See PHOTO 15), if it is a MADIX fixture, attach the TOP BRACKET with the SHORT ARM facing out (see PHOTO 17).

PHOTO 18

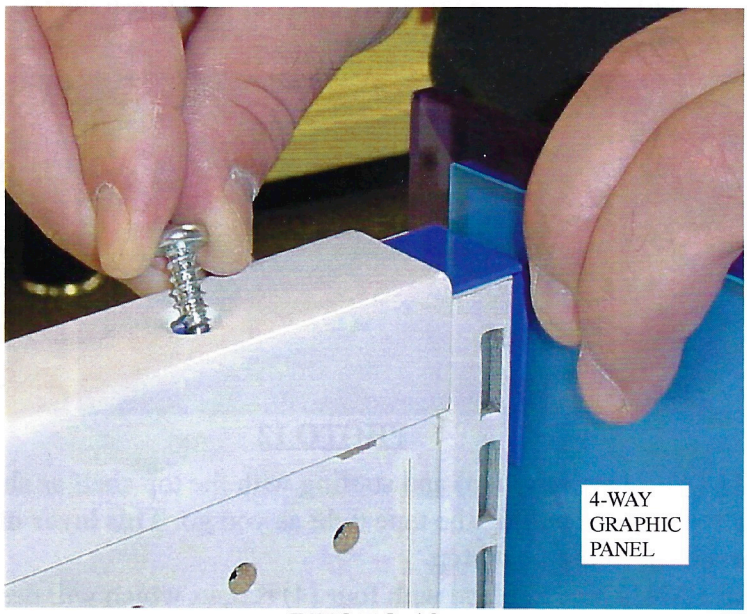

PHOTO 19

PHOTO 20

13. Secure two (2) DUAL LOCK STRIPS to the outer edge of the GONDOLA FIXTURE as shown in PHOTO 18, then remove the backing from the outer surface of both.
14. Align the new 4-WAY GRAPHIC PANEL with the TOP BRACKET seating into the gondola fixture and the inside edge flush with the fixture and press into place (see PHOTO 19 & 20). If you have a LOZIER gondola fixture, remove the one screw before inserting the TOP BRACKET, then when seated replace this screw (see PHOTO 19).

(**NOTE:** Make sure the TOP BRACKET seats ***under*** the TOP CAP as shown in PHOTO 19).

15. Repeat this procedure with remaining 4-WAY GRAPHIC PANELS.
16. Secure the bottom of the END PANEL to the LOWER BRACKETS with two (2) supplied screws per bracket (see PHOTO 21). Repeat this procedure with the remaining three (3) END PANELS.

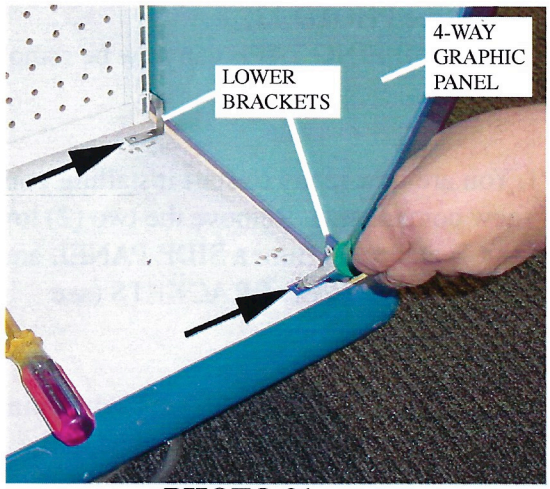

PHOTO 21

17. Remove the backing from one side of a small DUAL LOCK SET and secure to the short arm of a "L" PANEL TOP REVERSABLE BRACKET as shown in PHOTO 22. Position the "L" PANEL TOP REVERSABLE BRACKET on a middle SHELF and secure with screw and nut (see PHOTO 23).

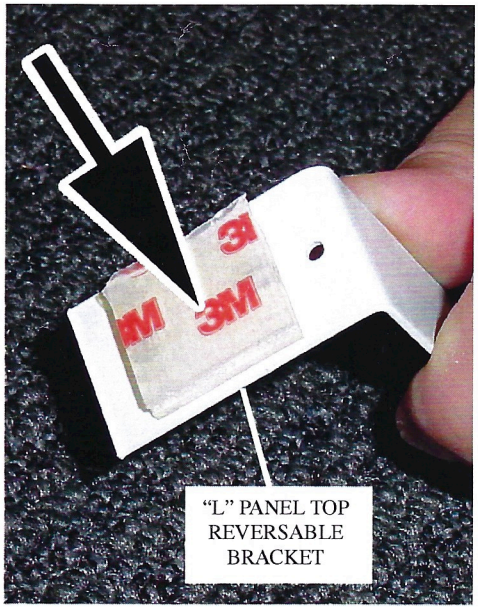

PHOTO 22

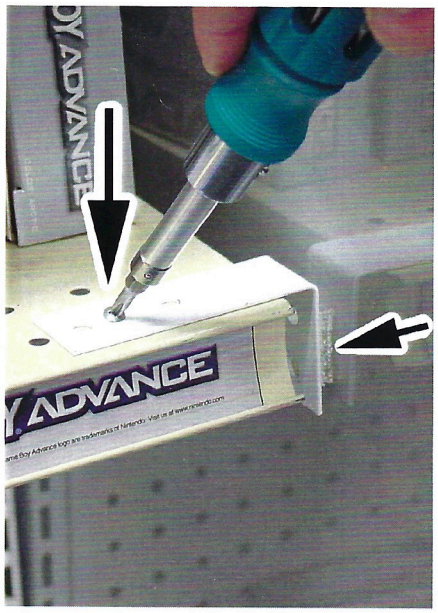

PHOTO 23

18. Position the HEADER ASSEMBLY on top of the unit and using the MAGNETIC PAD found on the bottom, seat into place (see PHOTO 24).

NOTE: If needed, screws are supplied so HEADER ASSEMBLY can be screwed down into place by removing the top panel in order to gain access to the inside.

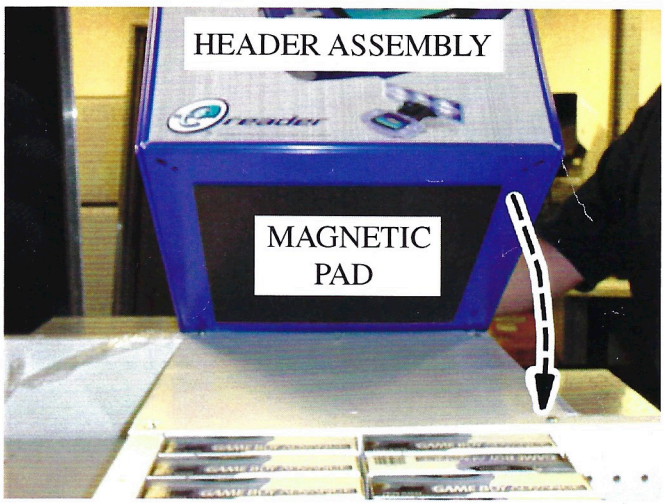

PHOTO 24

19. This completes the installation of your TRU 4-WAY UPDATE KIT

391909001 © RTC 9/2/2003